


## DOWNLOADING DATA



**Step 1**– Click the icon on your desktop called LogTag Analyzer and open the program.

**Step 2**– On the data logger, press and hold button (Review/Mark) to **pause recording**.

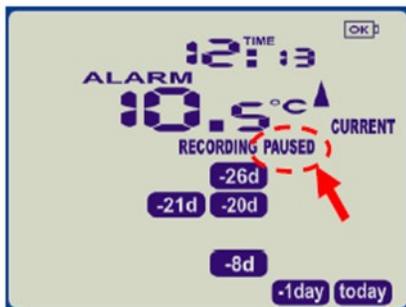

**Step 3**– The data logger will display “Paused” icon to indicate that recording has been paused.





**Step 4** – When the paused icon is displayed, unplug the data logger cable and bring the data logger to the LogTag Cradle.



**Step 5** – Insert the data logger into the cradle facing forward.




**Step 6** – When the data logger has been inserted into the cradle you will see the pop-up message shown to the right. Click “YES”. The data logger will re-configure when you click “YES”.

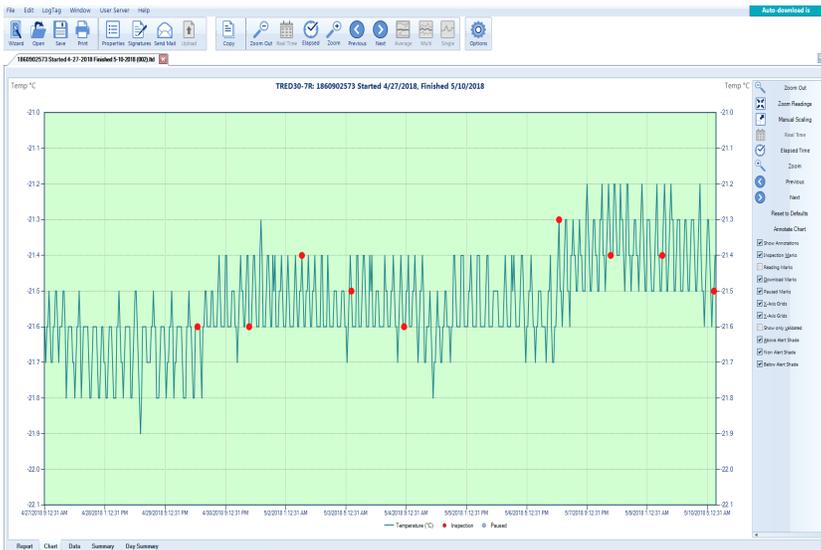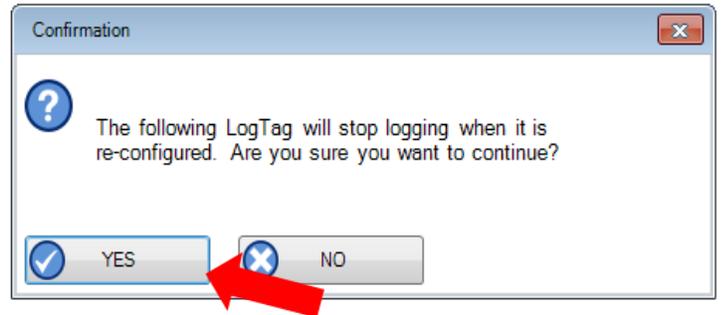

**Step 7** – The data will automatically be downloaded to the folder you chose during the software installation. You do not need to click anything. When data is downloaded a chart will display showing temperature readings.

**Step 8** – You can view Report, Chart, Data, Summary and Day Summary by clicking on the tabs below your chart.

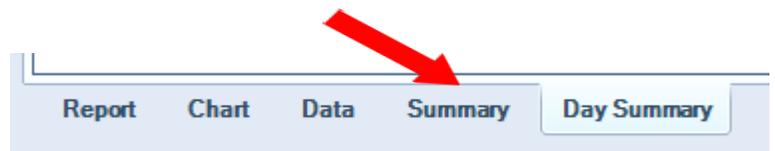

**Step 9** – When the data logger has been re-configured, it will display “Ready” icon.




**Step 9** – The data logger is removed from the cradle and taken to the storage unit. Make sure to return it to the refrigerator or freezer to which it is assigned.

**Step 10** – Plug in the cord that is connected to the glycol bottle.



**Starting the recorder**

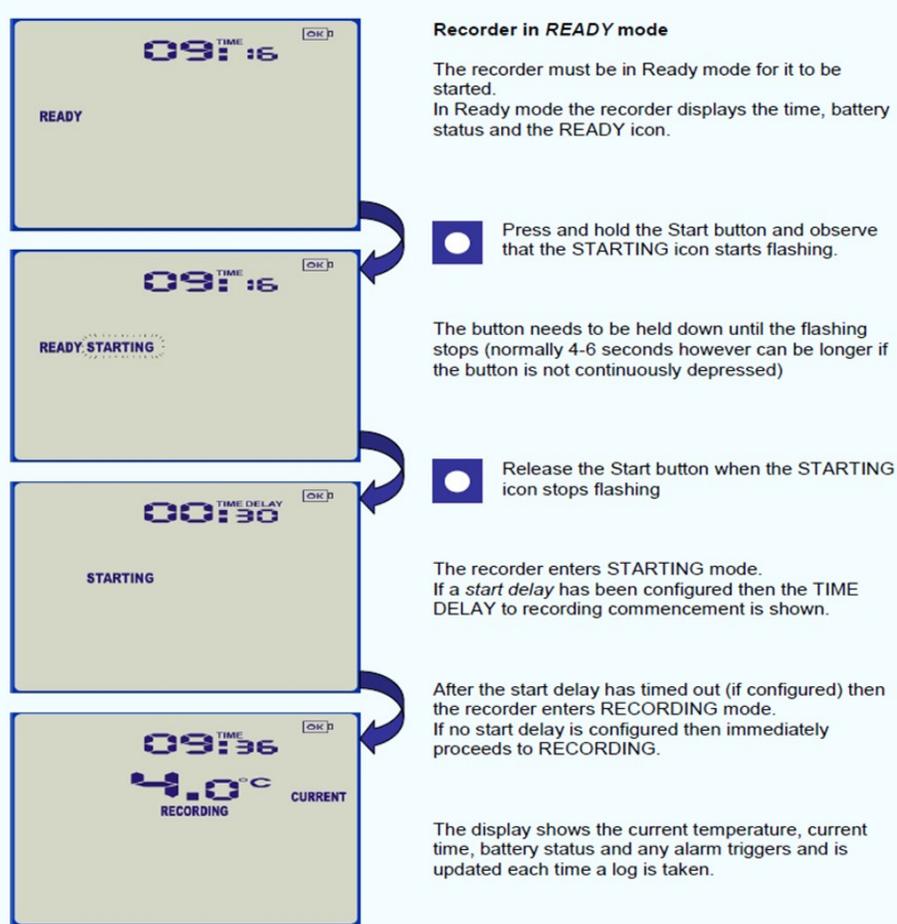

**Step 11** – Press and hold the start button for **4-6 seconds** until "Starting" icon stops flashing. Follow instructions at the left to start the data logger.